


OIL FILTER PAPER PLACEMENT DIAGRAM

OIL PUMP DIAGRAM

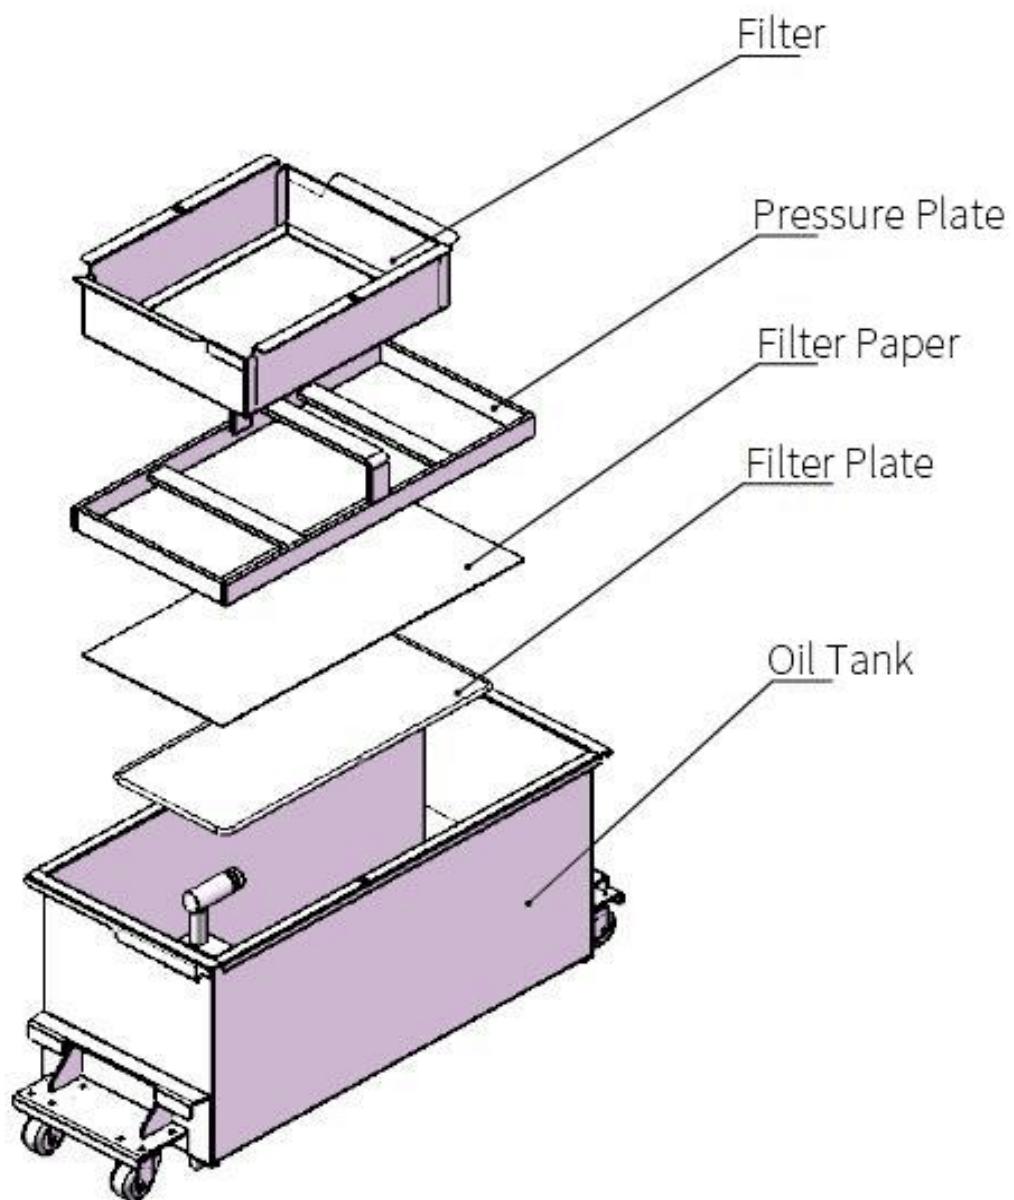

PUMP HEAD IS THE MAIN PART FOR OIL PUMP IT NEEDS TO BE CLEANED AND KEPT MAINTENANCE DAILY. WHEN YOU DISASSEMBLE IT, FOLLOW UP THE FOLLOWING CHART

CHART2

DISASSEMBLE THE OIL PUMP COVER

